

BULLETIN


Wide Width Welded Silage Sheeting

For best results when using Wide Width, Welded Silage Covers:

- Do not apply with the weld running the length of the pile
- Apply welded films up and over the width of the pile


IMPORTANT

Running the weld with the length of the pile (especially on a steep pile) will cause pressure on the weld and could cause tearing alongside the weld.

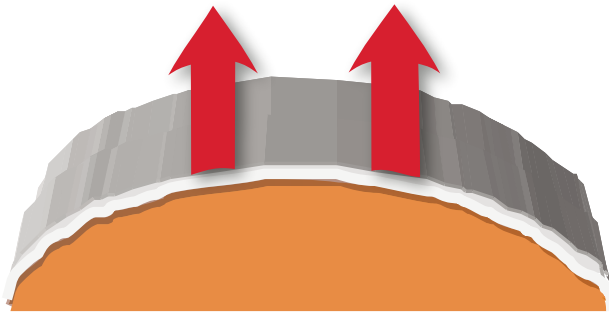

Incorrect Application:


Do not apply sheeting with the sheet welds running the length of the pile.

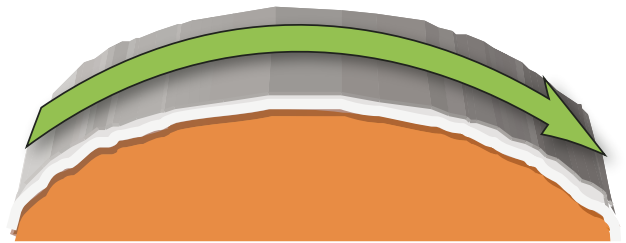

Correct Application:

Apply the sheeting up and over the pile, with welds running across the pile.



 100% recyclable 100% FDA compliant

AT Films, Inc.
P.O. Box 836 Station Main
Edmonton, AB Canada
T5J 2L4

Toll-Free: 1-800-661-3606
Phone: (780) 450-7760
Fax: (780) 450-7777
Email: info@atfilmsinc.com
www.atfilmsinc.com